

Manufacturer details

CONTINENTAL PRODUCT ENGINEERING
LIMITED

Prospect House, Little Money Road,
Loddon Business Park,
Norwich, Norfolk, NR14 6JD, UK

Tel: +44 (0)1508 522400
www.continental-uk.com



EasyAssist®

REMOTE

Mounting bracket Installation guide


OPD-0013872(2)

Issued 14th January 2025

Important information

- The product must be installed by a qualified Gas Network RGI (Registered Gas Installer).
- The product has been independently tested and certified by an ISO 17025 and ISO 17065 accredited laboratory.
- The product has been tested to work within these temperatures: -20 °C to +50 °C.
- Warranty: 5 years from installation.
- The product must only be installed in domestic premises.
- The product is only suitable for indoor installations.
- Do not install if the product appears to be damaged in any way.
- Do not use any cleaning chemicals on any part of this product.
- Do not spray product with oils or lubricants.
- Do not over tighten threads.
- The product is compatible only with EasyAssist® Remote [OPD-0014180]
- refer to EasyAssist® Remote installation guide [OPD-0013871] for further information.

The box contains

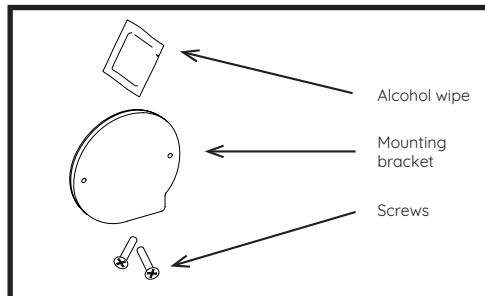

Tools required

Pozi screwdriver (PZ1)

Product information

EasyAssist® Remote is a trademark of Oxford Gas Products Limited © 2023-24. All rights reserved.

Patents: Granted patent GB2592068 and GB2613329, with patents pending in other jurisdictions, registered designs.



This product is manufactured by Continental Product Engineering Limited under license from Oxford Gas Products Limited.

Designed in Oxford, UK

Assembled in Norfolk, UK

Button Installation | Using adhesive mounting bracket



1

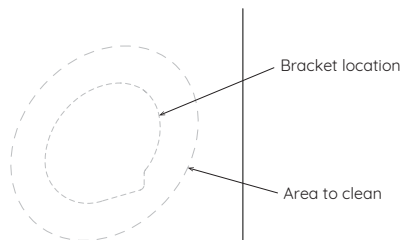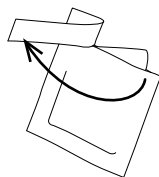

Open the alcohol wipe provided and thoroughly clean the area where the button is to be mounted, including an extra **20 mm** border all around.

Wait for at least **30 seconds** for the area to dry completely before attempting to mount the bracket.


2

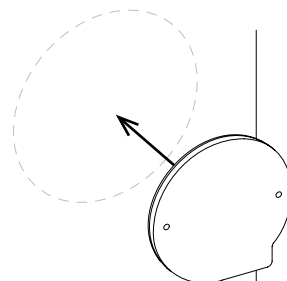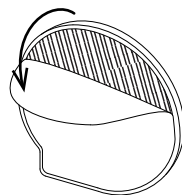

Peel away the backing film from the bracket to expose the adhesive pad. Apply firm pressure for at least **10 seconds** to stick the mounting bracket to the mounting surface.

Leave the bracket for at least **20 minutes** before attempting to attach the button.

3

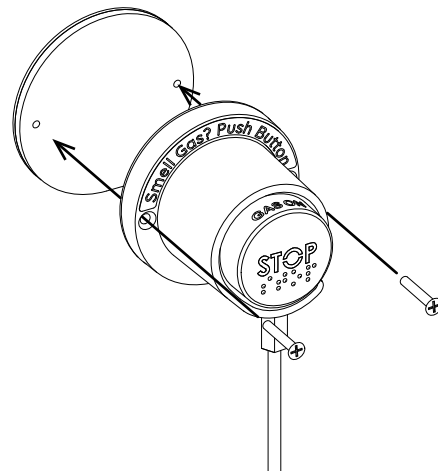

Use the screws provided to attach the button to the mounting bracket, taking care not to over tighten.

Note: take care to not use too much force or knock the button and bracket when first assembled. The adhesive pad will take up to **72 hours** to reach full strength.